


Cranial Mesh

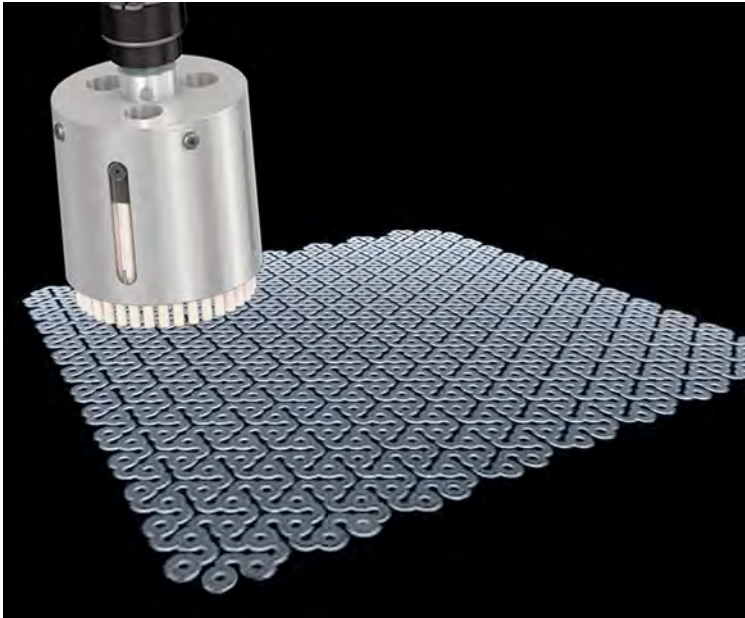


Workpiece information

Industry	Medical
Part name	Cranial Mesh
Material type	Titanium Alloy
Cutting process	Surface Deburring & Finishing

Processing conditions

Tool	XEBEC™ Brush Surface (A21-CB60M)
Processing detail	Deburring and finishing of surfaces and edges.
Spindle Speed	325 RPM
Feed Rate	50 IPM

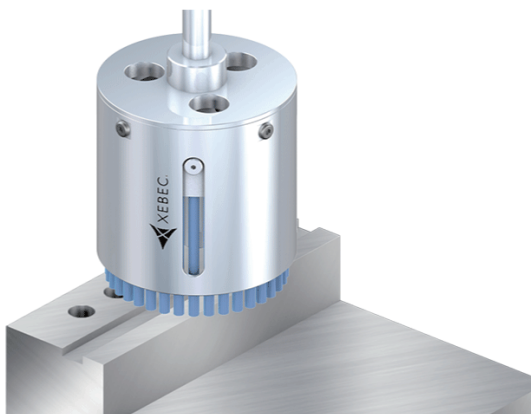

Deburring after face-milling, end-milling and drilling
Cutter mark removal and polishing on surface

Tool > XEBEC Brush™ Surface

Ideal for deburring, cutter mark removal and polishing on surface

