


Dental Screw

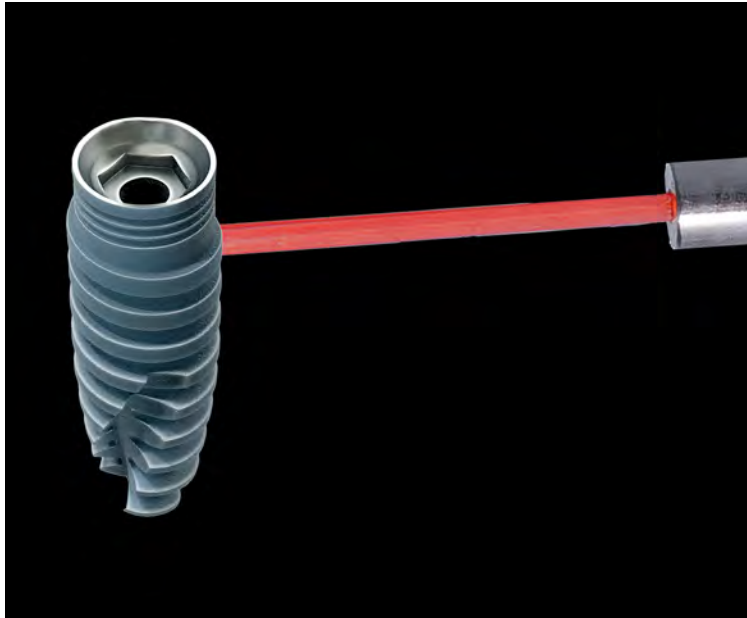

Workpiece information

Industry	Medical
Part name	Dental Screw
Material type	Cobalt Chromium
Cutting process	Surface Deburring & Finishing

Processing conditions

Tool	XEBEC™ Brush End Type (A11-EB01S)
Processing detail	Deburring and finishing of surfaces and edges.
Spindle Speed	6,000 RPM
Feed Rate	75 IPM



Can be used in cnc machines, robotic or handheld devices.

Tool > XEBEC Brush™ End Type

Ideal for cutter-mark removal, polishing and finishing of parts with narrow features.

